


ELECTRIC SERVO NUTRUNNER

AFC1500 MULTI SYSTEM

MULTI-2 UNIT HARDWARE MANUAL

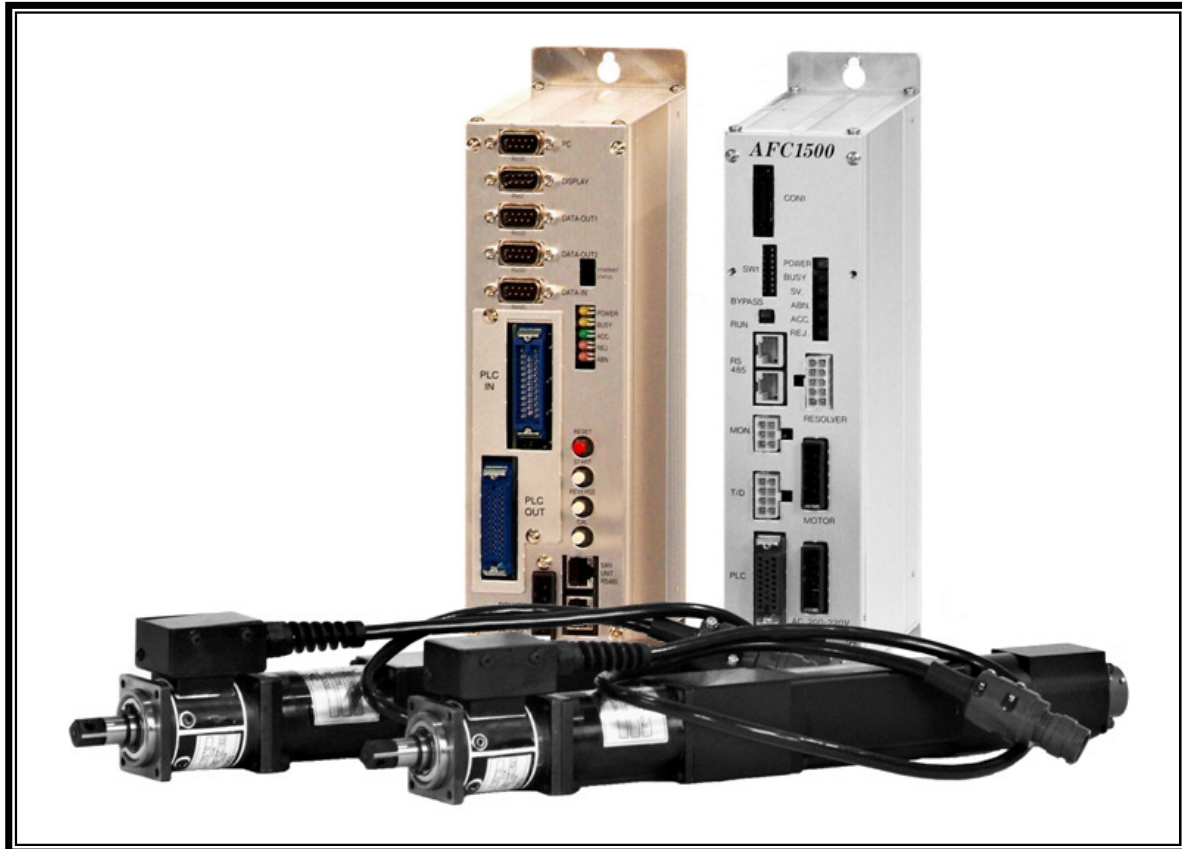

SECOND Edition March 2009



Automation Systems

51327 Quadrate Drive
Macomb, MI. 48042
Web: www.fec-usa.com

Phone: (586) 781-2100
Fax: (586) 781-0044
E-mail: sales@fec-usa.com

AFC1500E-HM2-2

WARNING

All applicable national and local codes must be followed when installing and operating the equipment detailed in this manual.

FAILURE TO ABIDE BY THESE CODES AND THE SPECIFICATIONS DESCRIBED IN THIS MANUAL CAN RESULT IN SERIOUS INJURY TO PERSONNEL AND/OR DAMAGE TO THE EQUIPMENT!



Any questions regarding the contents of this document or any related matter should be directed to FEC INC. at (586) 781-2100, faxed to (586) 781-0044 or emailed to support@fec-usa.com.

The information set forth in the following document is the property of FEC INC.

This document shall not be released to or copied for any person and/or organization without the expressed prior consent of FEC INC.

Unauthorized reproduction or distribution of this manual is strictly prohibited.

Please contact FEC INC. if you require additional copies.

| Revision | Revision Date | Revision History |
|----------|---------------|---|
| 1 | 04/2008 | Initial Release |
| 2 | 3/2009 | Revision affecting most chapters including minor fixes, revised information and new items – Added Ethernet, Profinet & Toolsnet info. |
| 2.1 | 2/2010 | Chapter 5 only- revised toolsnet version output format pg: 5-74 to 5-83 |
| | | |
| | | |

Manual Numbering Convention

AFC1500E-HM2-2

DSP1500 = Servo Press
AFC1500 = Nutrunner
FUSION = DC Hand Tool

E = English Version
S = Spanish Version
 *Japanese Version furnished by DDK
 (uses DDK numbering convention)

Version Number
 (Major Revision Level)

HS = SAN Unit Hardware
 Operation Manual
HM2 = Multi2 / Main Unit
 Hardware Operation Manual
HM-ENET = Ethernet Manual for
 Multi / Main Unit
SW = Software Manual

Introduction

Thank you for purchasing our **Electric Servo Nutrunner - AFC1500 System**.

This instruction manual describes the procedures for installation, wiring, handling and actions to be taken in case of any failure.

- ◆ This instruction manual shall be delivered to the end user who operates the equipment.
- ◆ Read all instructions before use, and always keep this instruction manual with the equipment.
- ◆ Items not described in this instruction manual shall be considered “unavailable”.
- ◆ The product specification and appearance described in this instruction manual is subject to change without notice.
- ◆ All rights reserved. Any disclosure, copying, distribution, or use of the information contained herein for other than its intended purpose is strictly prohibited.

For the safety of operator and equipment

- ◆ Read all “Safety Precautions” before using the equipment, and understand and observe all instructions and recommendations included in this manual.
- ◆ Read all instructions and recommendations included in this manual, understand the functions and performance of this nutrunner and correctly use this machine.
- ◆ Wirings and parameter settings shall only be conducted by a qualified professional.
- ◆ Never conduct a withstand voltage test or insulation resistance test on this equipment.
- ◆ Only operate this equipment with FEC supplied controllers, tools & cables.
- ◆ All stated warranties become invalid if other components are used.
- ◆ This system may be sold as components to a manufacturer (other than FEC) of a complete system. The manufacturer of the complete system is responsible for adhering to stated operation and safety brought forth in this manual. It is agreed between the buyer and FEC that it is the buyer’s responsibility to adhere to this manual.
- ◆ Indicate the following on all instruction manuals that use this equipment.
 - “**This equipment must be operated in accordance to FEC Supplied Manuals**”
 - “**This equipment is capable of high voltages hazardous to human life.**”

Points to check when unpacking

Please confirm the followings when unpacking this equipment.

- ◆ Ensure that you received the correct model as ordered.
- ◆ Ensure that there are no missing parts.
- ◆ Check for any damage caused during transportation.

Warranty

Warranty Period

FEC Inc. warrants that the equipment manufactured by it and delivered hereunder will be free of defects in material and workmanship for a period of twelve (12) months from the date of placing the equipment in operation, or eighteen (18) months from the date of shipment, or 500,000 machine cycles - whichever shall first occur.

Provisions of Warranty

Should any failure to conform to this warranty be reported in writing to the company within said period, the company shall at its option, correct such nonconformity by suitable repair to such equipment or furnish a replacement part from FEC or an FEC approved facility, provided the purchaser has stored, installed, maintained and operated such equipment in accordance with good industry practices and has complied with specific requirements & recommendations of the company. Accessories or equipment furnished by the company shall not be liable for any repairs, replacements or adjustments to the equipment or any costs of labor performed by the purchaser or others without the company's prior written approval.

The effects of corrosion, erosion and normal wear and tear are specifically excluded from the company's warranty. Performance warranties are limited to those specifically stated within the company's proposal. Unless responsibility for meeting such performance warranties are limited to specified shop or field tests, the company's obligation shall be to correct in the manner and for a period of time provided above.

THE COMPANY MAKES NO OTHER WARRANTY OR REPRESENTATION OF ANY KIND WHATSOEVER, EXPRESSED OR IMPLIED, EXCEPT THAT OF TITLE, AND ALL IMPLIED WARRANTIES, INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY DISCLAIMED.

Correction by the company of nonconformity's, whether patent or latent in the manner and for the period of time provided above, shall constitute fulfillment of all liabilities of the company for such nonconformity's, whether based on contract, warranty negligence, indemnity, strict liability or otherwise with respect to, or arising out of such equipment.

Non - Warranty Items

The following are defined as non-warranty situations that are outside the scope of warranty provided:

- Product is out of the warranty period as determined by FEC serial number tracking.
- Any cause external to the equipment, including but not limited to any act of God, lightning or power surges, abuse, negligence, accident or failure to maintain the proper operating environment.
- Use of equipment or adjustments or devices not approved by the manufacturer and FEC.
- Cosmetic damage to unit or any of the parts
- Consumable parts - for example; sockets, rest/wear pads, bushings, etc.
- Physical damage (example - damage caused by dropping, cut cables, etc.)
- Field Service required on a Warranty Part - FEC warranty covers the parts and labor only onsite at FEC.

Extended warranties are available as an addition to the standard warranty period outlined above - for all FEC Inc. systems. For extended warranties, contact FEC.

Safety Precautions

Read all instructions before operating the equipment in order to use this equipment safely and correctly. Prior to use, read this instruction manual carefully and fully understand the equipments functions, safety precautions and instructions. Safety precautions in this manual are marked with two symbols [Warning] and [Caution].

To prevent danger to the user and other persons as well as property damage, instructions that must be fully observed are marked with the symbols below.


- ◆ This instruction manual uses the following two symbols according to the degree of damage that may be caused when the instruction is not observed.



This symbol indicates that failure to observe instruction marked with this symbol may result in severe personal injury or death.



This symbol indicates that failure to observe instruction marked with this symbol may result in minor personal injury or material damage.

Even instructions that are marked with  may result in severe damage if they are not observed according to conditions.

Contents marked with the above symbols are very important instructions. For your safety, follow all instructions and especially those marked with these symbols.

- ◆ This instruction manual uses the following additional symbols for instructions that shall be observed.



Warning:
Electric shock



Warning:
Fire



Warning:
Pinch Point



Caution:
Fire



Caution:
Electric shock



Caution:
High Temperature



Prohibited



Do not disassemble



Required



Ground

Safety Precautions



Never touch rotating devices or any part of the nutrunner tool while it is rotating.
Make sure that no part of your body gets near any moving part of the tool.
The spindle may rotate unexpectedly, resulting in injury.



Do not remove the motors and gear cases of tools while power is applied.
The tool output spindle may rotate and cause injury.



Do not repair, disassemble, or modify the equipment individual components of the system.
Failure to observe this instruction may cause injury, electric shock, fire and malfunction.



Never operate the equipment where it is exposed to water, near a corrosive atmosphere or flammable gases. Failure to observe this instruction may cause fire.



Keep fingers away from the connectors while the equipment is turned ON and for a while after the equipment is turned OFF. Failure to observe this instruction may cause electric shock.



Wiring operation and maintenance work shall be conducted by a qualified professional.
Failure to observe this instruction may cause electric shock and injury.



Turn OFF the power when conducting wiring operation and maintenance.
Failure to observe this instruction may cause electric shock and injury.



Never damage the cables, apply excess stress to cables, or squeeze the cables.
Never use damaged cables.
Failure to observe this instruction may cause electric shock and fire.



Use type-3 grounding of FG terminals.
Failure to observe this instruction may cause electric shock.



In case of an abnormal odor, noise, or operation error occurrence, stop operation immediately and turn OFF the power source. Failure to observe this instruction may cause injury and fire.



Install a Power shutdown device in order to ensure the safety of equipment.
Failure to observe this instruction may cause injury.



Install an emergency stop circuit on the outside of equipment in order to stop operation promptly. Failure to observe this instruction may cause injury.



Keep away from the equipment during recovery from a temporary blackout and ensure safety measures are conducted after restarting the equipment. The equipment may suddenly restart.
Failure to observe this instruction may cause injury.

Safety Precautions



Transport the equipment properly according to its weight.
Failure to observe this instruction may cause injury and malfunction.

The conditions when transporting the equipment by ship is as below.



- ◆ Ambient temperature: $-5^{\circ}\text{C} \sim +55^{\circ}\text{C}$ (Avoid freezing)
- ◆ Ambient humidity: 50% RH or lower (Avoid moisture)
- ◆ Package: Tight seal
- ◆ Rust prevention measure: Apply grease or oil on tools.

Failure to observe this instruction may cause earth leakage and malfunction.



Do not hold cables and output spindles when transporting the tools.
Failure to observe this instruction may cause injury and malfunction.



Do not hold the indicator on the front panel when transporting the AXIS Unit.
The indicator may come off and drop from the front panel.
Failure to observe this instruction may cause injury and malfunction.

The equipment shall be stored under the following conditions.



- ◆ Ambient temperature: $-5^{\circ}\text{C} \sim +55^{\circ}\text{C}$ (Avoid freezing)
- ◆ Ambient humidity: 90% RH or lower (Avoid moisture)
- ◆ Atmosphere: Indoors (Avoid direct sunlight)
 - No corrosive gases or flammable gases
 - No oil mist, dust, water, salt, iron powder
- ◆ Avoid direct vibration or shocks

Failure to observe this instruction may cause earth leakage and malfunction.

Safety Precautions



Install all tools firmly where they can bear the maximum torque during operation.
Failure to observe this instruction may cause injury and malfunction.



Install the AXIS Unit firmly inside the control panel using the specified screws.
Failure to observe this instruction may cause malfunction.



Use the specified tool for the AXIS (SAN) Unit.
Failure to observe this instruction may cause fire and malfunction.



The AXIS (SAN) Unit shall maintain the specified distance from other devices.
Failure to observe this instruction may cause fire and malfunction.



Do not block the ventilation hole of the AXIS (SAN) Unit.
Avoid any foreign body from entering inside the equipment.
Failure to observe this instruction may cause fire and malfunction.



The power source shall be provided with safety measures such as breakers and circuit protectors. Failure to observe this instruction may cause fire and malfunction.



Do not use tools or AXIS (SAN) Units that are damaged or missing parts.
Failure to observe this instruction may cause fire, injury and malfunction.



Do not get on the top of equipment or do not place heavy objects on the top of equipment.
Failure to observe this instruction may cause injury and malfunction.



Do not subject the equipment to excess shock and impact.
Failure to observe this instruction may cause malfunction.



Apply proper wiring size and firmly tighten all termination points.
Failure to observe this instruction may cause injury, false operation and malfunction.



Operate the equipment within the specified power supply voltage.
Failure to observe this instruction may cause injury, electric shock, fire and malfunction.



Take sufficient measures to shield the equipment when operating the in the following conditions:

- ◆ Location where electrical noise is generated
- ◆ Location where the equipment is subjected to a strong electric field or magnetic field
- ◆ Location near a high power wire.

Failure to observe this instruction may cause injury, false operation, and malfunction.

afety Precautions

on



Never operate the equipment with wet hands or while standing in a wet location.
Failure to observe this instruction may cause electric shock.



Keep fingers away from the AXIS (SAN) Unit radiating fin and tool motors while the equipment is turned ON or for a while after the equipment is turned OFF. These parts may become very hot. Failure to observe this instruction may cause burns.



Use the equipment under the following conditions.

- ◆ Ambient temperature: 0°C~+45°C (Avoid freezing)
- ◆ Ambient humidity: 90% RH or lower (Avoid moisture)
- ◆ Atmosphere: Indoors (Avoid direct sunlight)
 - No corrosive gases or flammable gases
 - No oil mist, dust, water, salt, iron powder
- ◆ Avoid direct vibration or shocks

Failure to observe this instruction may cause earth leakage and malfunction.



Confirm and adjust all parameters before operation in order to prevent unexpected movement of the equipment.

Failure to observe this instruction may cause injury, false operation and malfunction.



Never conduct extreme adjustments or setting changes that may cause instability of operation.
Failure to observe this instruction may cause injury, false operation and malfunction.



The equipment may restart suddenly when the equipment is reset with the start signal ON.
Always ensure that the start signal is OFF before resetting the equipment.

Failure to observe this instruction may cause injury.



Do not turn the equipment ON and OFF repeatedly.
Failure to observe this instruction may cause malfunction.



Do not use the equipment at torque higher than the maximum torque capacity.
Failure to observe this instruction may shorten equipment life or cause malfunction due to the high temperature caused by overload.



In case any abnormality occurs, remove the cause and ensure safety before resetting and restarting the equipment.

Failure to observe this instruction may cause injury.

Table of Contents

Chapter 1: Outline

| | | |
|-----|-------------------------|-----|
| 1.1 | About this Manual..... | 1-2 |
| 1.2 | Functions..... | 1-3 |
| 1.3 | Safety Precautions..... | 1-4 |

Chapter 2: Specifications

| | | |
|-----|----------------------|-----|
| 2.1 | Specifications..... | 2-2 |
| 2.2 | Unit Dimensions..... | 2-3 |

Chapter 3: System Description

| | | |
|-----|---------------------------|-----|
| 3.1 | System Block Diagram..... | 3-2 |
| 3.2 | Unit Description..... | 3-3 |

Chapter 4: Installation & Wiring

| | | |
|---------|---|------|
| 4.1 | Installation..... | 4-2 |
| 4.2 | Power Wiring Reference..... | 4-3 |
| 4.3 | Input Power Connection..... | 4-4 |
| 4.4 | RS485 Connection..... | 4-4 |
| 4.5 | User Console Ethernet Connection..... | 4-5 |
| 4.5.1 | Optional Ethernet Port – Data Communication..... | 4-6 |
| 4.6 | Serial Communication Ports..... | 4-7 |
| 4.6.1 | PC Port..... | 4-8 |
| 4.6.2 | Display Port..... | 4-9 |
| 4.6.3 | Data-Out (1) Port..... | 4-9 |
| 4.6.3.1 | Available Output Data..... | 4-10 |
| 4.6.3.2 | Output Data Format..... | 4-11 |
| 4.6.4 | Data-Out (2) Port..... | 4-12 |
| 4.6.5 | Data-In Port..... | 4-12 |
| 4.7 | PLC Interface Communication (I/O)..... | 4-13 |
| 4.7.1 | Control Interfaces..... | 4-13 |
| 4.7.2 | Input Signals..... | 4-14 |
| 4.7.3 | Output Signals..... | 4-15 |
| 4.7.4 | Signal Timing Chart..... | 4-18 |
| 4.7.5 | External DIP Switch Setting..... | 4-19 |
| 4.8 | Setting Default TCP/IP Address – User Console Port..... | 4-19 |
| 4.9 | Firmware Flash Connector..... | 4-19 |

Table of Contents

Chapter 5: Control Interfaces

| | | |
|---------|---|------|
| 5.1 | Interface Board | 5-2 |
| 5.2 | Interface Board DIP Switch Setup..... | 5-2 |
| 5.3 | Discrete I/O Interface..... | 5-3 |
| 5.3.1 | Sinking Type (NPN)..... | 5-3 |
| 5.3.1.1 | Discrete Signal Connection (Sinking Type)..... | 5-4 |
| 5.3.2 | Sourcing Type (PNP)..... | 5-5 |
| 5.3.2.1 | Discrete Signal Connection (Sourcing Type)..... | 5-6 |
| 5.3.3 | Input Signals (PLC-IN)..... | 5-7 |
| 5.3.4 | Output Signals (PLC-OUT)..... | 5-8 |
| 5.3.4.1 | Output Data Banks..... | 5-9 |
| 5.3.5 | Standard I/O Cable – Wire Color Code..... | 5-10 |
| 5.4 | Interbus S [®] Interface..... | 5-11 |
| 5.4.1 | Component Descriptions..... | 5-13 |
| 5.4.2 | User Console Software Settings | 5-14 |
| 5.4.3 | Input Signals (Reference Layout)..... | 5-15 |
| 5.4.4 | Output Signals (Reference Layout)..... | 5-16 |
| 5.5 | DeviceNet [®] Interface..... | 5-17 |
| 5.5.1 | Component Descriptions..... | 5-19 |
| 5.5.2 | User Console Software Settings | 5-20 |
| 5.5.3 | Input Signals (Reference Layout)..... | 5-21 |
| 5.5.4 | Output Signals (Reference Layout)..... | 5-22 |
| 5.6 | Profibus [®] Interface..... | 5-23 |
| 5.6.1 | Component Descriptions..... | 5-25 |
| 5.6.2 | User Console Software Settings | 5-26 |
| 5.6.3 | Input Signals (Reference Layout)..... | 5-27 |
| 5.6.4 | Output Signals (Reference Layout)..... | 5-28 |
| 5.7 | Modbus Plus [®] Interface..... | 5-29 |
| 5.7.1 | Component Descriptions..... | 5-31 |
| 5.7.2 | User Console Software Settings | 5-33 |
| 5.7.3 | Input Signals (Reference Layout)..... | 5-34 |
| 5.7.4 | Output Signals (Reference Layout)..... | 5-35 |
| 5.8 | CC-Link [®] Interface (Version 1)..... | 5-36 |
| 5.8.1 | Component Descriptions..... | 5-38 |
| 5.8.3 | Input Signals (Reference Layout)..... | 5-40 |
| 5.8.4 | Output Signals (Reference Layout)..... | 5-41 |
| 5.9 | CC-Link [®] Interface (Version 2)..... | 5-42 |
| 5.9.1 | Component Descriptions..... | 5-44 |
| 5.9.2 | User Console Software Settings | 5-46 |
| 5.9.3 | Input Signals (Reference Layout)..... | 5-47 |
| 5.9.4 | Output Signals (Reference Layout)..... | 5-48 |
| 5.10 | Allen-Bradley Remote I/O Interface..... | 5-49 |
| 5.10.1 | Component Descriptions..... | 5-51 |
| 5.10.2 | User Console Software Settings | 5-52 |
| 5.10.3 | Input Signals (Reference Layout)..... | 5-53 |
| 5.10.4 | Output Signals (Reference Layout)..... | 5-54 |

Table of Contents

| | |
|---|------|
| 5.11 Ethernet-I/P Interface..... | 5-55 |
| 5.11.1 Component Descriptions..... | 5-56 |
| 5.11.2 User Console Software Settings..... | 5-57 |
| 5.11.3 Input Signals (Reference Layout)..... | 5-58 |
| 5.11.4 Output Signals (Reference Layout)..... | 5-59 |
| 5.11.5 PLC Message Transfer Setup Example..... | 5-61 |
| 5.12 Profinet Interface..... | 5-69 |
| 5.12.1 Component Descriptions..... | 5-70 |
| 5.12.2 User Console Software Settings..... | 5-71 |
| 5.12.3 Input Signals (Reference Layout)..... | 5-72 |
| 5.12.4 Output Signals (Reference Layout)..... | 5-73 |
| 5.13 Input / Output Signal Layout using Toolsnet Version..... | 5-74 |

Chapter 6: Troubleshooting

| | |
|--------------------|-----|
| 6.1 Abnormals..... | 6-2 |
|--------------------|-----|

Blank Page