

## Table of Contents

	<b>Page</b>
<b>Chapter 1: Outline</b>	<b>1-1</b>
1.1 About This operations manual	1-2
1.2 Features	1-3
1.3 Functions.	1-5
1.4 System requirements	1-6
<b>Chapter 2: Specifications</b>	<b>2-1</b>
2.1 Main Specifications	2-2
2.2 Duty Cycle Calculation	2-3
2.3 Controller Unit Specifications	2-4
2.4 Capability.	2-5
2.4.1 Nutrunner Tool Specification Table.	2-6
2.4.2 Nutrunner Decimal Point Display Table.	2-7
<b>Chapter 3: System Description</b>	<b>3-1</b>
3.1 Controller	3-2
3.1.1 Controller Part Number Breakdown	3-2
3.1.2 Controller Front Panel	3-4
3.1.3 Controller Back Panel	3-5
3.2 Fusion Tool	3-7
3.2.1 Fusion Tool Part Number Breakdown	3-7
3.2.2 Fusion Tool Control, Displays and Connectors	3-8
<b>Chapter 4: System Setup and Wiring</b>	<b>4-1</b>
4.1 Design and Build Procedure	4-2
4.2 Component Dimensions	4-3
4.2.1 Controller Unit Dimensions	4-3
4.3 Unit Arrangement	4-4
4.4 Nutrunner (Tool) Dimensions	4-5
4.4.1 Straight Tool	4-5
4.4.2 Right Angle Tool	4-6
4.4.3 Pistol Tool	4-7
4.5 Connection Diagrams	4-9
4.6 Power Requirements and Connections	4-10
4.6.1 Controller Unit	4-10
4.7 Wiring PLC I/O	4-11
4.7.1 Explanation of Controller Unit I/O	4-12
4.7.2 Work / Parameter Select Table	4-13
4.7.3 Bank Select Table	4-14
4.7.4 Bank Output Servo Error Table	4-16
4.7.5 PLC Wiring Sample	4-17
4.8 RS-232 Data Communication Ports.	4-18
4.8.1 Front Panel DB9 PC Connection for AFC User Console Software	4-18
4.8.2 Rear Panel DB9 PC Connection (RS232)	4-19
4.8.3 Rear Panel RS232 Communication Protocol	4-20
4.8.4 Rear Panel RS232 Alternate Communication Protocol	4-24
4.8.5 Rear Panel RS232 Alternate Communication Protocol	4-25
4.9 Torque/Angle MON. DB9 (external monitoring connector).	4-26

## Table of contents

4.10 Controller Unit DIP Switch setting.	4-27
4.10.1 Controller Unit DIP switch positions 1 ~ 3	4-27
4.10.2 Controller Unit DIP switch positions 4 ~ 8	4-28
4.11 Tool Connection (cabling)	4-29
4.11.1 Cable Installation Guidelines	4-30
4.11.2 Considerations for Cable Trolleys	4-31
4.11.3 Considerations for Flexible Cable Tracks	4-31
4.11.4 Considerations for Cable Trays and Ladders	4-31
4.11.5 Tool Cable - Preamplifier Connector.	4-32
4.11.6 Tool Cable - Motor Connector	4-32
4.11.7 Tool Cable - Resolver Connector	4-32
4.12 Firmware Flash Connector (CN8).	4-33
4.13 SYNC Connector	4-34
4.14 Options – Ethernet Card	4-35
4.14.1 Ethernet Set-up of PC to Communicate to Ethernet Module	4-36
4.14.2 Ethernet Module Connection	4-37
4.15 Options – Fieldbus Interfaces	4-38
4.15.1 Fieldbus Interfaces – Profibus-DP	4-39
4.15.2 Fieldbus Interfaces – Allen Bradley Remote I/O	4-44
4.15.3 Fieldbus Interfaces – DeviceNet	4-48
<b>Chapter 5: Power Up and Initial Checks</b>	<b>5-1</b>
5.1 Before Powering On	5-2
5.2 Initial Data Setting	5-3
<b>Chapter 6: Fastening Instructions</b>	<b>6-1</b>
6.1 Fastening Control	6-2
6.1.1 Torque Control Method	6-2
6.1.2 Angle Control Method	6-6
6.2 Monitoring Functions	6-12
6.2.1 Peak Torque Monitoring	6-12
6.2.3 Final Torque Monitoring	6-14
6.2.3 Angle Monitoring	6-16
6.2.4 Point-to-Point Torque Rate Monitoring	6-18
6.2.5 Time	6-20
6.3 Speed Functions	6-21
6.4 Reverse Functions	6-23
6.5 Torque Recovery	6-24
6.6 Added Functions	6-25
6.6.1 Current Monitor / Control	6-25
6.6.2 Angle Correction	6-26
6.6.3 Reduced Fastening Reaction	6-26
6.6.4 VariSpeed	6-26
6.6.5 Work (Batch Counting)	6-26
6.6.6 Torque Inhibit	6-27
<b>Chapter 7: System Operations</b>	<b>7-1</b>
7.1 Fusion Display and Programming Unit Operation	7-2
7.1.1 Manual Fastening controls	7-2
7.1.2 Fastening Indicators	7-3
7.1.3 Fastening Preset / Result displays	7-3

7.1.4 Fastening Presetting / Result Display Controls	7-4
7.2 Run State Modes.	7-5
7.2.1 Display indication modes.	7-5
7.2.2 Real-time display indication mode.	7-6
7.2.3 Fastening results display mode.	7-7
7.2.4 Parameter display mode	7-8
7.2.5 Parameter Data List & Data Explanation	7-9
7.2.6 Status Display	7-24
7.3 Download / Setup Mode Operation.	7-25
7.3.1 Download Mode selection	7-25
7.3.2 Setup Mode selection	7-26
7.3.3 Parameter Number Selection.	7-27
7.3.4 Data # selection	7-28
7.3.5 Data Edit Mode Operation	7-29
7.3.6 Parameter Copy	7-30
7.4 Calibration adjustment.	7-31
7.5 Optional Real Time Clock Module	7-32
7.6 Tubenut Head Setup	7-33
7.6.1 Recommended Parameter Setup for Tubenut Head	7-34
7.6.2 Tubenut Head Operation	7-35
<b>Chapter 8: Maintenance and Inspection</b>	<b>8-1</b>
8.1 Inspection Items	8-2
8.1.1 Nutrunner (Tool)	8-2
8.1.2 Tool Cable	8-2
8.1.3 Controller Unit	8-3
8.1.4 Auxiliary Tool Heads	8-3
8.2 Basic operational tests	8-4
8.2.1 Torque transducer.	8-4
8.2.2 Resolver.	8-4
8.2.3 Motor.	8-4
8.2.4 Transmission Disassembly and Inspection	8-6
8.3 Replacements	8-7
8.3.1 Controller Unit Replacement	8-7
8.3.2 Replace Nutrunner (tool)	8-8
8.3.3 Replace Homerun cables	8-8
<b>Chapter 9: Troubleshooting</b>	<b>9-1</b>
9.1 Abnormal Conditions.	9-2
9.2 Torque Transducer Abnormals.	9-3
Calibration Error	9-3
9.2.1 Code 1-0 Torque transducer / Zero Voltage error.	9-3
9.2.2 Code 1-1 Torque transducer / Cal Voltage error.	9-3
9.2.3 Code 1-2 Torque transducer / Zero check error.	9-4
9.2.4 Code 1-3 Torque transducer / Cal self-check error.	9-4
9.2.5 Code 1-4 Torque transducer / started on Zero condition error.	9-4
9.2.6 Code 1-5 Torque transducer / started on Cal condition error	9-4
9.2.7 Code 1-6 Torque transducer / Zero Level Self Check Error	9-5
9.3 Torque Over	9-6

## Table of contents

9.3.1 Code 2-0 Torque Over Abnormal / Torque Inhibit High Limit	9-6
9.4 Tool EEPROM Errors	9-7
9.4.1 Code 3-0 Preamplifier / Tool ID Checksum error	9-7
9.4.2 Code 3-1 Preamplifier / Tool type error	9-7
9.4.3 Code 3-2 Preamplifier / Started without tool connected	9-7
9.4.4 Code 3-3 Preamplifier / Tool is not connected	9-7
9.5 System Memory Errors	9-8
9.5.1 Code 4-0 system memory error / Flash ROM write error	9-8
9.5.2 Code 4-1 system memory error / Flash ROM read error	9-8
9.5.3 Code 4-2 system memory error / Servo Amp Flash ROM error	9-8
9.6 Servo Amplifier Response / Resolver	9-9
9.6.1 Code 5-0 Servo Amplifier reply error / No reply from Resolver	9-9
9.7 Servo Type Error	9-10
9.7.1 Code 6-0 Servo Type error / Servo Type mismatch	9-10
9.9 Servo Amplifier Error	9-11
9.9.1 Code 8-1 Servo Amplifier error / Servo is over heated	9-11
9.9.2 Code 8-4 Servo Amplifier error / Over current	9-11
9.9.3 Code 8-5 Servo Amplifier error /Internal power supply.	9-11
9.9.4 Code 8-6 Servo Amplifier error / Input Voltage abnormal	9-12
9.9.5 Code 8-9 Servo Amplifier error / Over speed.	9-12
9.9.6 Code 8-10 Servo Amplifier error / over load ( I square T)	9-12
9.9.7 Code 8-11 Servo Amplifier error / Resolver Signal Error .	9-12
9.10 Parameter Error	9-13
9.10.1 Code 9-0 Parameter Error / Missing speed preset.	9-13
9.10.2 Code 9-1 Parameter Error/ Missing Speed or Time	9-13
9.10.3 Code 9-2 Parameter Error/ Parameter Select Error	9-13
9.10.4 Code 9-3 Parameter Error/ Missing Reverse Speed	9-13
9.10.5 Code 9-4 Parameter Error/ Torque Speed not set	9-13
9.10.6 Code 9-5 Parameter Error/ Torque Setup Error	9-14
9.10.7 Code 9-6 Parameter Error/ Angle Setup Error	9-14
9.10.8 Code 9-7 Parameter Error/ Reverse Torque over.	9-14
9.11 AFC1500 SAN Unit Fastening Faults and Causes	9-15
9.11.1 Accept Conditions	9-15
9.11.2 Torque Reject Conditions	9-15